DK

ADVARSEL
GENERELT

Dette modul er beregnet for tilslutning til livsfarlige elektriske spændinger. Hvis denne advarsel ignoreres, kan det føre til alvorlig legemsbeskadigelse eller mekanisk ødelæggelse.
For at undgå farer for elektriske stød og brand skal sikkerhedsreglerne overholdes, og vejledningerne skal følges.
Specifikationerne må ikke overskrides, og modulet må kun benyttes som beskrevet i det følgende.
Installationsvejledningen skal studeres omhyggeligt, før modulet tages i brug. Kun kvalificeret personale (teknikere) må installere dette modul. Hvis modulet ikke benyttes som beskrevet i denne installationsvejledning, så forringes modulets beskyttelsesforanstaltninger.

ADVARSEL
FARLIG SPÆNDING

Der må ikke tilsluttes farlig spænding til modulet. Det dette er fastmonteret, og følgende operationer bør kun udføres på modulet i spændingsløs tilstand og under ESD-sikre forhold:
Installation, ledningsomlægning og -demontage.
Fejlfinding på modulet.
Reparation af modulet og udskiftning af sikringer må kun foretages af PR electronics A/S.

ADVARSEL
Modulets frontplade må ikke åbnes, da dette vil medføre skade på stikforbindelsen til display- / programmeringsenhederne i PR 4500-serien. Modulerne indeholder ingen DIP-switche eller jumpere.

SIKKERHEDSREGLER

Modtagelse og udpakning
Udpak modulet uden at beskadige det. Kontrollér ved modtagelsen, at modultypen svarer til den bestilte. Indpakningen bør følge modulet, indtil dette er monteret på bilvende plads.

Miljøforhold
Undgå direkte sollys, kraftigt støv eller varme, mekaniske rystelser og stød, og udsæt ikke modulet for regn eller kraftig fugt. Om nødvendigt skal opvarmning, uld over de opgivne grænser for omgivelsestemperatur, forhindres ved hjælp af ventilation.
Alle moduler kan anvendes i Måle- / overspændings-kategori II og Forureningsgrad 2. Modulerne er designet til at være sikker mindst op til en højde af 2000 m. Eheden er konstrueret til indendørs brug.

Installation
Modulet må kun tilsluttes af kvalificerede teknikere, som er bekendte med de tekniske uttryk, advarsler og instruktioner i installationsvejledningen, og som vil følge disse.
Hvis der er tvivl om modulets rette håndtering, skal der rettes henvendelse til den lokale forhandler eller alternativt direkte til **PR electronics A/S.**
Det er ikke tilladt at benytte flerkoret ledning ved tilslutning af forsyningsspænding med mindre ledningsenderne er forsynet med ledningstyller.
Flerkoret ledning skal installeres med en afisoleringslængde på 5 mm eller via en egnet isoleret terminal som f.eks. en dupsko.
Beskrivelse af indgang / udgang og forsyningsforbindelser findes i produktmanualen og på sideskiltet.
Modulet er forsynet med skrueterminaler og skal forsynes fra en dobbeltisoleret/ forstærket isoleret spændingsforsyning. En afbryder placeres let tilgængeligt og tæt ved modulet. Afbryderen skal mærkes således, at der ikke er tvivl om, at den afbryder spændingen til modulet.
Ved installation på Power Rail 9400 bliver forsyningsspændingen leveret af Power Control Unit type 9410.

Kalibrering og justering
Under kalibrering og justering skal måling og tilslutning af eksterne spændinger udføres i henhold til denne installationsvejledning, og teknikeren skal benytte sikkerhedsmæssigt korrekte værktøjer og instrumenter.

Betjening under normal drift
Operatører må kun indstille eller betjene modulerne, når disse er fast installeret på forsvarlig måde i tavler el. lignende, så betjeningen ikke medfører fare for liv eller materiel. Dvs., at der ikke er berøringsfare, og at modulet er placeret, så det er let at betjene.

Rengøring
Modulet må, i spændingsløs tilstand, rengøres med en klud let fugtet med destilleret vand.

Eletriske specifikationer
Specifikationsområde..... -20°C til +60°C
Forsyningsspænding..... 19,2...31,2 VDC
Max. forbrug:
1 kanal, lav strøm / høj strøm.. ≤ 1,9 W / ≤ 2,5 W
2 kanaler, lav strøm..... ≤ 3,1 W
Max. effekttab:
1 kanal, lav strøm / høj strøm.. ≤ 1,1 W / ≤ 1,7 W
2 kanaler, lav strøm..... ≤ 2,0 W
Sikring 9203..... 1,25 A T / 250 VAC
Isolationsspænding,
test / drift..... 2,6 kVAC / 300 VAC
Isolation - udgang 1
til udgang 2..... 1,5 kVAC / 150 VAC
Isolation - relæ til forsyning... 1,5 kVAC / 150 VAC (forstærket isolation)
Kalibreringstemperatur ..... 20...28°C
EMC-immunitetspåvirkning..... < ±0,5% af span
Udvidet EMC-immunitet:
NAMUR NE21, A-kriterium
ginsstøj..... < ±1% af span
2-trådsforsyning (kl. 4A...43).. 25...16 VDC / 0...20 mA
Relativ luftfugtighed..... < 95% RH (ikke kond.)
Mål (HxBxD)..... 109 x 23,5 x 104 mm
Kapslingsklasse..... IP20

NPN og mekanisk kontakt
Trig-niveau LOW..... < 2,0 VDC
Trig-niveau HIGH..... > 4,0 VDC
Max. ekstern spænding..... 28 VDC

PNP-indgang
Trig-niveau LOW..... < 8,0 VDC
Trig-niveau HIGH..... > 10,0 VDC
Max. ekstern spænding..... 28 VDC

Udgang
Lav strøm 9023x1xx..... 35 mA
Høj strøm 9203x2xx..... 60 mA

Godkendelser
DNV, Ships & Offshore..... TAA00000JD
ClassNK..... TA24034M
c UL us, UL 61010-1..... E314307
EAC..... TR-CU 020/2011
EAC LVD..... TR-CU 004/2011
EAC Ex..... TR-CU 012/2011
SIL..... IEC 61508

Overholdte myndighedskrav
EMC..... 2014/30/EU & UK SI 2016/1091
LVD..... 2014/35/EU & UK SI 2016/1101
ATEX..... 2014/34/EU & UK SI 2016/1107
RoHS..... 2011/65/EU & UK SI 2012/3032

UK

WARNING
GENERAL

This device is designed for connection to hazardous electric voltages. Ignoring this warning can result in severe personal injury or mechanical damage.
To avoid the risk of electric shock and fire, the safety instructions of this guide must be observed and the guidelines followed. The specifications must not be exceeded, and the device must only be applied as described in the following.
Prior to the commissioning of the device, this installation guide must be examined carefully.
Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

WARNING
HAZARDOUS VOLTAGE

Until the device is fixed, do not connect hazardous voltages to the device. The following operations should only be carried out on a disconnected device and under ESD safe conditions:
General mounting, connection and disconnection of wires.
Troubleshooting the device.
Repair of the device and replacement of circuit breakers must be done by PR electronics A/S only.

WARNING
Do not open the front plate of the device as this will cause damage to the connector for the displays / programming fronts in the PR 4500 series. The SYSTEM 9000 devices contain no DIP-switches or jumpers.

SAFETY INSTRUCTIONS

Receipt and unpacking
Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

Environment
Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.
All devices can be used for Measurement / Overvoltage Category II and Pollution Degree 2. The modules are designed to be safe at least under an altitude up to 2000 m. The device is designed for indoor use.

Mounting
Only qualified technicians who are familiar with the technical terms, warnings, and instructions in this installation guide and who are able to follow these should connect the device.
Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively, **PR electronics A/S.**
The use of stranded wires is not permitted for mains wiring except when wires are fitted with cable ends.
Stranded wire should be installed with an insulation stripping length of 5 mm or via a suitable insulated terminal such as a bootlace ferrule.
Descriptions of input / output and supply connections are shown in the product manual and on the side label.
The device is provided with field wiring terminals and shall be supplied from a Power Supply having double / reinforced insulation. A power switch shall be easily accessible and close to the device. The power switch shall be marked as the disconnecting unit for the device.
For installation on Power Rail 9400 the power is supplied by Power Control Unit 9410.

Calibration and adjustment
During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this installation guide. The technician must use tools and instruments that are safe to use.

Cleaning
When disconnected, the device may be cleaned with a cloth moistened with distilled water.

Electrical specifications
Specifications range..... -20°C to +60°C
Supply voltage ..... 19.2...31.2 VDC
Max. required power:
1 channel,
low current / high current ..... ≤ 1.9 W / ≤ 2.5 W
2 channels, low current..... ≤ 3.1 W
Max. power dissipation:
1 channel,
low current / high current ..... ≤ 1.1 W / ≤ 1.7 W
2 channels, low current..... ≤ 2.0 W
Fuse..... 1.25 A SB / 250 VAC
Isolation voltage,
test / operation..... 2.6 kVAC / 300 VAC
Isolation - output 1
to output 2 ..... 1.5 kVAC / 150 VAC
Isolation - relay to supply..... 1.5 kVAC / 150 VAC (reinforced isolation)
Calibration temperature..... 20...28°C
EMC immunity influence..... < ±0.5% of span
Extended EMC immunity:
NAMUR NE21, A criterion,
burst..... < ±1% of span
2-wire supply
(terminal 44...43)..... 25...16 VDC / 0...20 mA
Relative humidity..... < 95% RH (non-cond.)
Dimensions (HxWxD)..... 109 x 23.5 x 104 mm
Protection degree..... IP20

NPN and mechanical switch input
Trig level LOW..... < 2.0 VDC
Trig level HIGH..... > 4.0 VDC
Max. external voltage..... 28 VDC

PNP input
Trig level LOW..... < 8.0 VDC
Trig level HIGH..... > 10.0 VDC
Max. external voltage..... 28 VDC

Output
Low current 9023x1xx..... 35 mA
High current 9203x2xx..... 60 mA

Approvals
DNV, Ships & Offshore..... TAA00000JD
ClassNK..... TA24034M
c UL us, UL 61010-1..... E314307
EAC..... TR-CU 020/2011
EAC LVD..... TR-CU 004/2011
EAC Ex..... TR-CU 012/2011
SIL..... IEC 61508

Observed authority requirements
EMC..... 2014/30/EU & UK SI 2016/1091
LVD..... 2014/35/EU & UK SI 2016/1101
ATEX..... 2014/34/EU & UK SI 2016/1107
RoHS..... 2011/65/EU & UK SI 2012/3032

FR

AVERTISSEMENT
INFORMATIONS GENERALES

Ce module est conçu pour supporter une connexion à des tensions électriques dangereuses. Si vous ne tenez pas compte de cet avertissement, cela peut causer des dommages corporels ou des dégâts mécaniques. Pour éviter les risques d'électrocution et d'incendie, conformez-vous aux consignes de sécurité et suivez les instructions mentionnées dans ce guide. Vous devez vous limiter aux spécifications indiquées et respecter les instructions d'utilisation de ce module, telles qu'elles sont décrites dans ce guide. Il est nécessaire de lire ce guide attentivement avant de mettre ce module en marche. L'installation de ce module est réservée à un personnel qualifié (techniciens). Si la méthode d'utilisation de l'équipement diffère de celle décrite par le fabricant, la protection assurée par l'équipement risque d'être altérée.

AVERTISSEMENT
TENSION DANGEREUSE

Tant que le module n'est pas fixé, ne le mettez pas sous tensions dangereuses. Les opérations suivantes doivent être effectuées avec le module débranché et dans un environnement exempt de décharges électrostatiques (ESD): montage général, raccordement et débranchement de fils et recherche de pannes sur le module.
Seule PR electronics SARL est autorisée à réparer le module et à remplacer les fusibles.

AVERTISSEMENT
Ne pas ouvrir la plaque avant du module au risque d'endommager le connecteur des indicateurs/façades de programmation de la série PR 4500. Les modules ne contiennent ni de commutateurs DIP ni de cavaliers.

CONSIGNES DE SECURITE

Réception et déballage
Déballez le module sans l'endommager. Il est recommandé de conserver l'emballage du module tant que ce dernier n'est pas définitivement monté. A la réception du module, vérifiez que le type de module reçu correspond à celui que vous avez commandé.

Environnement
N'exposez pas votre module aux rayons directs du soleil et choisissez un endroit à l'humidité modérée et à l'abri de la poussière, des températures élevées, des chocs et des vibrations mécaniques et de la pluie. Le cas échéant, des systèmes de ventilation permettent d'éviter qu'une pièce soit chauffée au-delà des limites prescrites pour les températures ambiantes.
Tous les modules peuvent être installés dans catégorie de mesure / surtension II et degré de pollution 2. Ce module est conçu pour fonctionner de manière sûre jusqu'à une altitude inférieure à 2000 m. L'appareil est conçu pour une utilisation à l'intérieur.

Montage
Il est conseillé de réserver le raccordement du module aux technicians qualifiés qui connaissent les termes techniques, les avertissements et les instructions de ce guide et qui sont capables d'appliquer ces dernières.
Si vous avez un doute quelconque quant à la manipulation du module, veuillez contacter votre distributeur local. Vous pouvez également vous adresser à **PR electronics SARL.**
Pour le raccordement électrique de l'alimentation généralé, il est possible d'utiliser des fils multibrins seulement s'ils possèdent des embouts de câblage. Les fils multibrins doivent être installés avec une longueur de dénudage de 5 mm ou au moyen d'une borne isolée appropriée, par exemple un embout de câblage.
Les connexions des alimentations et des entrées / sorties sont décrites dans le manuel du produit et sur l'étiquette de la face latérale du module.
Les appareils sont équipés de borniers à vis et doivent être raccordés à une alimentation qui a une isolation double ou renforcée. L'interrupteur doit être à proximité du module et facile d'accès. Ce bouton doit être étiqueté avec la mention : peut couper la tension du module.
Pour une installation sur le rail d'alimentation 9400, le module sera alimenté par le contrôleur d'alimentation 9410.

Etalonnage et réglage
Lors des opérations d'étalonnage et de réglage, il convient d'effectuer les mesures et les connexions des tensions externes en respectant les spécifications mentionnées dans ce guide. Les techniciens doivent utiliser des outils et des instruments pouvant être manipulés en toute sécurité.

Maintenance et entretien
Une fois le module hors tension, prenez un chiffon imbibé d'eau distillée pour le nettoyer.

Spécifications
Plage de température..... -20° à +60°C
Tension d'alimentation..... 19,2...31,2 Vcc
Puissance nécessaire max.,
1 / 2 voies..... ≤ 1,1 W / 1,9 W
Puissance dissipée max.,
1 / 2 voies..... ≤ 0,8 W / 1,2 W
Fusible..... 1,25 A SB / 250 Vca
Tension d'isolation,
test/opération..... 2,6 kVca / 300 Vca
Isolation - sortie 1 à sortie 2.. 1,5 kVca / 150 Vca
Isolation -
relais à l'alimentation..... 1,5 kVca / 150 Vca (isolation renforcée)
Température d'étalonnage..... 20...28°C
Immunité CEM ..... < ±0,5% de l'échelle
Immunité CEM améliorée:
NAMUR NE21, critère A,
burst..... < ±1% de l'échelle
Alimentation 2-fils
(bornes 44...43)..... 25...16 Vcc / 0...20 mA
Humidité relative..... < 95% HR (sans cond.)
Dimensions (HxLxP) ..... 109 x 23,5 x 104 mm
Degré de protection..... IP20

Entrée NPN et contact
Niveau de déclenchement
BAS ..... < 2,0 Vcc
Niveau de déclenchement
HAUT..... > 4,0 Vcc
Tension externe max. ..... 28 Vcc

Entrée PNP
Niveau de déclenchement
BAS ..... < 8,0 Vcc
Niveau de déclenchement
HAUT..... > 10,0 Vcc
Tension externe max. ..... 28 Vcc

Sortie
Courant bas 9023x1xx..... 35 mA
Courant haut 9203x2xx..... 60 mA

Approbations
DNV, Ships & Offshore..... TAA00000JD
ClassNK..... TA24034M
c UL us, UL 61010-1..... E314307
EAC..... TR-CU 020/2011
EAC LVD ..... TR-CU 004/2011
EAC Ex..... TR-CU 012/2011
SIL..... IEC 61508

Compatibilité avec les normes
CEM..... 2014/30/UE & UK SI 2016/1091
DBT..... 2014/35/UE & UK SI 2016/1101
ATEX..... 2014/34/EU & UK SI 2016/1107
RoHS..... 2011/65/UE & UK SI 2012/3032

DE

WARNUNG
ALLGEMEINES

Dieses Gerät ist für den Anschluss an lebensgefährliche elektrische Spannungen gebaut. Missachtung dieser Warnung kann zu schweren Verletzungen oder mechanischer Zerstörung führen. Um eine Gefährdung durch Stromstöße oder Brand zu vermeiden müssen die Sicherheitsregeln der Installationsanleitung eingehalten, und die Anweisungen befolgt werden. Die Spezifikationswerte dürfen nicht überschritten werden, und das Gerät darf nur gemäß folgender Beschreibung benutzt werden. Diese Installationsanleitung ist sorgfältig durchzulesen, ehe das Gerät in Gebrauch genommen wird.
Nur qualifizierte Personen (Techniker) dürfen dieses Gerät installieren. Wenn das Gerät nicht wie in dieser Installationsanleitung beschrieben benutzt wird, werden die Schutzeinrichtungen des Gerätes beeinträchtigt.

WARNUNG
GEFÄHRLICHE SPANNUNG

Vor dem abgeschlossenen festen Einbau des Gerätes darf daran keine gefährliche Spannung angeschlossen werden, und folgende Maßnahmen sollten nur in spannungslosem Zustand des Gerätes und unter ESD-sicheren Verhältnisse durchgeführt werden:
Installation, Montage und Demontage von Leitungen.
Fehlersuche im Gerät.
Reparaturen des Gerätes und Austausch von Sicherungen dürfen nur von PR electronics A/S vorgenommen werden.

WARNUNG
Die Frontplatte des Gerätes darf nicht geöffnet werden, weil hierdurch die Kontakte zur Kontaktierung der Frontdisplays der PR 4500-Serie beschädigt werden können. Die Geräte enthalten keine internen DIP-Schalter oder Programmierbrücken.

SICHERHEITSREGELN

Empfang und Auspacken
Packen Sie das Gerät aus, ohne es zu beschädigen, und kontrollieren Sie beim Empfang, ob der Gerätetyp ihrer Bestellung entspricht. Die Verpackung sollte beim Gerät bleiben, bis dieses am endgültigen Platz montiert ist.

Umgebungsbedingungen
Direkte Sonneneinstrahlung, starke Staubentwicklung oder Hitze, mechanische Erschütterungen und Stöße sind zu vermeiden; das Gerät darf nicht Regen oder starker Feuchtigkeit ausgesetzt werden. Bei Bedarf muss eine Erwärmung, welche die angegebenen Grenzen für die Umgebungstemperatur überschreitet, mit Hilfe eines Kühlgebläses verhindert werden.
Alle Geräte können für Messs- / Überspannungskategorie II und Verschmutzungsgrad 2 benutzt werden. Das Gerät ist so konzipiert, dass es auch in einer Einsatzhöhe von bis zu 2000 m noch sicher funktioniert. Das Gerät ist auf den Gebrauch in Innenräumen ausgelegt.

Installation
Das Gerät darf nur von qualifizierten Technikern angeschlossen werden, die mit den technischen Ausdrücken, Warnungen und Anweisungen in dieser Installationsanleitung vertraut sind und diese befolgen.
Sollten Zweifel bezüglich der richtigen Handhabung des Gerätes bestehen, sollte man mit dem Händler vor Ort Kontakt aufnehmen. Sie können aber auch direkt mit **PR electronics GmbH** Kontakt aufnehmen.
Der Einsatz von verdrillter Leitung ist nicht erlaubt außer die Enden sind mit Adernhülsen versehen. Die Litzendrähte sollten mit einer 5 mm Abisolierlänge oder mit einer entsprechend isolierten Klemme, wie beispielsweise einer Aderendhülse, installiert werden.
Eine Beschreibung von Eingangs- / Ausgangs- und Versorgungsanschlüssen befindet sich a im Produktmanual und auf dem Typenschild.
Das Gerät ist mit Feldverdrahtungsklemmen ausgestattet und wird von einem Netzteil mit doppelter / verstärkter Isolierung versorgt. Der Netzschalter sollte leicht zugänglich und in der Nähe des Gerätes sein. Der Netzschalter sollte mit einem Schild gekennzeichnet sein, auf dem steht, dass durch Betätigung dieses Schalters das Gerät vom Netz genommen wird.
Für den Anschluss auf der Power Rail 9400 wird das Gerät über das Power Control Unit 9410 versorgt.

Kalibrierung und Justierung
Während der Kalibrierung und Justierung sind die Messung und der Anschluss externer Spannungen entsprechend dieser Installationsanleitung auszuführen, und der Techniker muss hierbei sicherheitsmäßig einwandfreie Werkzeuge und Instrumente benutzen.

Reinigung
Das Gerät darf in spannungslosem Zustand mit einem Lappen gereinigt werden, der mit destilliertem Wasser leicht angefeuchtet ist.

Elektrische Daten
Umgebungstemperatur ..... -20°C bis +60°C
Versorgungsspannung..... 19,2...31,2 VDC
Leistungsbedarf, max.,
1 / 2 Kan..... ≤ 1,1 W / 1,9 W
Max. Verlustleistung,
1 / 2 Kan..... ≤ 0,8 W / 1,2 W
Sicherung..... 1,25 A T / 250 VAC
Isolationsspannung,
Test/Betrieb..... 2,6 kVAC / 300 VAC
Isolierung - Ausgang 1
zum Ausgang 2..... 1,5 kVAC / 150 VAC
Isolierung - Relais zur Versorg. 1,5 kVAC / 150 VAC (erhöhte isolation)
Kalibrierungstemperatur..... 20...28°C
EMV Störspannungseinfluss.... < ±0,5% d. Messspanne
Erweitere EMV Störfestigkeit:
NAMUR NE21, Kriterium A,
Burst..... < ±1% d. Messspanne
2-Draht-Versorg. (Kl. 44...43).. 25...16 VDC / 0...20 mA
Relative Luftfeuchtigkeit ..... < 95% RH (nicht kond.)
Abmessungen (HxBxT) ..... 109 x 23,5 x 104 mm
Schutzart..... IP20

NPN und mechanischer Schalter
Trig-Niveau LOW..... < 2,0 VDC
Trig-Niveau HIGH ..... > 4,0 VDC
Max. externe Spannung..... 28 VDC

PNP-Eingang
Trig-Niveau LOW..... < 8,0 VDC
Trig-Niveau HIGH ..... > 10,0 VDC
Max. externe Spannung..... 28 VDC

Ausgang
Low current 9023x1xx..... 35 mA
High current 9203x2xx..... 60 mA

Zulassungen
DNV, Ships & Offshore..... TAA00000JD
ClassNK..... TA24034M
c UL us, UL 61010-1..... E314307
EAC..... TR-CU 020/2011
EAC LVD ..... TR-CU 004/2011
EAC Ex..... TR-CU 012/2011
SIL..... IEC 61508

Eingehaltene Behördenvorschriften
EMV..... 2014/30/EU & UK SI 2016/1091
LVD..... 2014/35/EU & UK SI 2016/1101
ATEX..... 2014/34/EU & UK SI 2016/1107
RoHS..... 2011/65/EU & UK SI 2012/3032

DK Kina RoHS UK China RoHS FR RoHS chinois DE China-RoHS

Part Name	Hazardous Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr (VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Printed circuit board	X	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T 11364
O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.
X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

The product's Environmentally Friendly Use Period (EFUP) is 50 years

DK Dokumentation, godkendelser og yderligere information findes på internettet på **www.prelectronics.dk**

UK Documentation, permits and other information can be found on the internet at **www.prelectronics.com**

FR La documentation et toute autre information peuvent être trouvées sur l'Internet sur notre site: **www.prelectronics.fr**

DE Dokumentationen, Zulassungen und andere Informationen können auf unserer Internet-Seite unter **www.prelectronics.de** gefunden und abgerufen werden.

BR Documentações, licenças e outras informações podem ser encontradas no site **www.prelectronics.com**

SN9203_112 (2425)

9203A / 9203B

9203 电磁阀/警报灯驱动器
丹麦製造
佩勒电子（上海）有限公司
云鈴东路 651 号 305 室
普陀区, 上海 200062 中国

9203A 9203B

EU DECLARATION OF CONFORMITY
(9203doC_103)

As manufacturer
PR electronics A/S, Lerbakken 10, DK-8410 Rønde
hereby declares that the following product
Type: 9203
Name: Solenoid / alarm driver
From serial no.: 221012291
is in conformity with the following directives and standards:

The EMC Directive 2014/30/EU and later amendments
EN 61326-1 : 2013
Immunity test requirements for equipment intended to be used in an industrial electromagnetic environment. For specification of the acceptable EMC performance level, refer to the electrical specifications for the device.

The Low Voltage Directive 2014/35/EU and later amendments
EN 61010-1 : 2010 + A1 : 2019

The ATEX Directive 2014/34/EU and later amendments
EN 60079-0 : 2018, EN 60079-11 : 2012, EN 60079-15 : 2019 and EN 60079-7 : 2015 + A1 : 2018
ATEX certificate: KEMA 07ATEX0147 X
ATEX notified body (type approval)
DEKRA Certification B.V.
Meander 1051, 6825 MJ Arnhem
P.O. Box 5185, 6802 ED Arnhem
The Netherlands

The RoHS2 Directive 2011/65/EU and later amendments
EN IEC 63000 : 2018

Notified body 0344
DEKRA Certification B.V.
Meander 1051, 6825 MJ Arnhem
P.O. Box 5185, 6802 ED Arnhem
The Netherlands

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Rønde, 27 April 2023

Stig Lindemann, CTO
Manufacturer's signature

UKCA DECLARATION OF CONFORMITY
(9203doC_UKCA_100)

As manufacturer
PR electronics A/S, Lerbakken 10, DK-8410 Rønde
hereby declares that the following product
Type: 9203
Name: Solenoid / alarm driver
From serial no.: 221012291
is in conformity with the following statutory requirements:

The Electromagnetic Compatibility Regulations 2016 (UK SI 2010/1091) and later amendments
EN 61326-1 : 2013
Immunity test requirements for equipment intended to be used in an industrial electromagnetic environment. For specification of the acceptable EMC performance level, refer to the electrical specifications for the device.

The Electrical Equipment (Safety) Regulations 2016 (UK SI 2010/1101) and later amendments
EN 61010-1 : 2010 + A1 : 2019

The Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016 (UK SI 2016/1107) and later amendments
EN 60079-0 : 2018, EN 60079-11 : 2012, EN 60079-15 : 2019 and EN 60079-7 : 2015 + A1 : 2018
UK type examination certificate: DEKRA 21UKEX0181 X (9203A & 9203B)
UK type examination certificate: DEKRA 23UKEX0106X (9203B)

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (UK SI 2012/3032) and later amendments
EN IEC 63000 : 2018

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Rønde, 31 July 2023

Stig Lindemann, CTO
Manufacturer's signature

DK Ex-godkendelser UK I.S approvals FR Approbations S.I. DE Ex-Zulassungen

	9203Bxxxx		9203Axxxx	
IECEx	[Ex ia Ga] IIC/IIB/IIA Ex ec nC IIC T4 Gc [Ex ia Da] IIIC [Ex ia Ma] I	IECEx KEM 09.0001X Installation Drawing: 9203QI01	Ex ec nC IIC T4 Gc	IECEx KEM 09.0001X Installation Drawing: 9203QI01
ATEX	II (1) G [Ex ia Ga] IIC/IIB/IIA II 3 G Ex ec nC IIC T4 Gc II (1) D [Ex ia Da] IIIC I (M1) [Ex ia Ma] I	KEMA 07ATEX 0147X Installation Drawing: 9203QA01	II 3 G Ex ec nC IIC T4 Gc	KEMA 07ATEX 0147X Installation Drawing: 9203QA01
UKEX	[Ex ia Ga] IIC/IIB/IIA II 3 G Ex ec nC IIC T4 Gc [Ex ia Da] IIIC [Ex ia Ma] I	DEKRA 21UKEX0181X DEKRA 23UKEX0106X Installation Drawing: 9203QA01	II 3 G Ex ec nC IIC T4 Gc	DEKRA 21UKEX0181X Installation Drawing: 9203QA01
FM	Install in CL I, Div. 2, Gr. A-D T4 Provides IS circuits to CL I-III, Div. 1/2, Gr. A-G or CL I, ZnZ AEx/Ex nA nC [ia] IIC T4	FM19US0057X / FM19CA0030X Installation Drawing: 9203QF01	Install in CL I, Div. 2, Gr. A-D T4 or CL I, Zone 2, AEx/Ex nA nC IIC T4	FM19US0057X / FM19CA0030X Installation Drawing: 9203QF01
INMETRO	[Ex ia Ga] IIC/IIB/IIA [Ex ia Da] IIIC / [Ex ia Ma] I Ex ec nC IIC T4 Gc	DEKRA 23.0008X Installation Drawing: 9203QB01	Ex ec nC IIC T4 Gc	DEKRA 23.0008X Installation Drawing: 9203QB01
UL (9203Axxx-U9 / 9203Bxxx-U9)	Install in CL I DIV2 GP A-D T4 provides IS circuits to CL I-III DIV 1 GP A-G or install in CL I Zn2 Gp IIC T4 provides IS circuits to CL I Zn0 Gp IIIC/Zn20 Gp IIIC	E233311 Installation Drawing: 9203QU01	Install in CL I, Div. 2, Gr. A-D T4 or CL I, Zone 2, AEx nA nC IIC T4	E233311 Installation Drawing: 9203QU01
CCC	Ex nA nC [Ex ia Ga] IIC T4 Gc Ex nA nC [Ex iaD] IIC T4 Gc [Ex ia Ga] IIC/IIB/IIA [Ex iaD]	2020322304003423	Ex nA nC IIC T4 Gc	2020322304003423
KCs (9203Axxx-KCs / 9203Bxxx-KCs)	[Ex ia Ga] IIC/IIB/IIA [Ex ia] IIC/IIB/IIA [Ex ia D] 20	21-AV4BO-0182X 21-AV4BO-0183X	Ex nA nC IIC T4 GC Ex nA nC IIC T4	21-AV4BO-0184X

DK Sideskilt UK Side label FR Etiquette DE Typenschild

Typenr.
Type no.
No. de type.
Typennr.

9203B1B
SN: +23456789
Tag:TAG34

Produktionsår fremgår af de to første cifre i serienummeret.
Year of manufacture can be taken from the first two digits in the serial number.
L'année de production est définie grace aux deux premiers chiffres du numéro de série.
Die ersten beiden Ziffern der Seriennummer geben das Produktionsjahr an.

DK Hvis modulet installeres som type Ex ia eller ec, skal installationsplanen angives på etiketten med en permanent markering i den tilhørende boks.

UK When this product has been installed as Ex ia or ec, use a permanent marker in the appropriate box to indicate the type of installation on the label.

FR Lorsque ce produit est installé selon une protection Ex ia ou ec, utilisez un marqueur indélébile dans la case appropriée pour indiquer le type d'installation sur l'étiquette.

DE Wenn dieses Produkt mit der Schutzart Ex ia oder ec installiert wurde, verwenden Sie einen Permanentmarker im entsprechenden Feld, um die Verwendungsart der Installation auf dem Etikett zu kennzeichnen.

PR electronics A/S, Lerbakken 10, 8410 Rønde
info@prelectronics.com www.prelectronics.com
Phone +45 8637 2677, Denmark

A1: Output slot	Ex IDMS	A2: Output slot	Ex IDMS
A1: Output slot	Ex I +	A2: Output slot	Ex I +
A1: Output slot	Ex Z +	A2: Output slot	Ex Z +
A1: Output slot	Ex U +	A2: Output slot	Ex U +
B1: Output slot	Ex IDMS	B2: Output slot	Ex IDMS
B1: Output slot	Ex I +	B2: Output slot	Ex I +
B1: Output slot	Ex Z +	B2: Output slot	Ex Z +
B1: Output slot	Ex U +	B2: Output slot	Ex U +
B1: Supply +	19.2 to 31.2 VDC	B2: Supply +	19.2 to 31.2 VDC
B1: Supply -	Relay N.C.	B2: Supply -	Relay N.C.
B1: Input slot	IS	B2: Input slot	IS
B1: Input slot	IS +	B2: Input slot	IS +
B1: Input slot	IS -	B2: Input slot	IS -
B1: Input slot	IS +	B2: Input slot	IS +
B1: Input slot	IS -	B2: Input slot	IS -

CE EAC UKCA cULus Listed IND CONT. EQ. 22KA 5Y Z7 E311752 | CE DNV 10 RDS 2344 | UKCA cULus Listed IND CONT. EQ. 22KA 5Y Z7 E311752 | Install in CL I Zone 2 Gp IIC/IIB/IIA Ex ec nC IIC T4 Gc Install: 9203qA01 | Install in CL I Div 2 Gp A-D T4 Ex nA nC [ia Ga] IIC T4 Gc Install: 9203qF01 | Attention ! Read manual before installation / operation. Lire manuel avant installation / opération. | Ex ia IIC T4 Ga Ex ia IIIC T85°C Da Ex ia I Ma Install: 9203qB01 | Ex ia IIC T4 Ga Ex ia IIIC T85°C Da Ex ia I Ma Install: 9203qU01 | Ex ia IIC T4 Ga Ex ia IIIC T85°C Da Ex ia I Ma Install: 9203qU01 | Ex ia IIC T4 Ga Ex ia IIIC T85°C Da Ex ia I Ma Install: 9203qU01

Ex nA nC [ia Ga] IIC T4 Gc Install: 9203qC01 | Ex ia IIC T4 Ga Ex ia IIIC T85°C Da Ex ia I Ma Install: 9203qC01 | Ex ia IIC T4 Ga Ex ia IIIC T85°C Da Ex ia I Ma Install: 9203qC01 | Ex ia IIC T4 Ga Ex ia IIIC T85°C Da Ex ia I Ma Install: 9203qC01

FM19US0057X FM19CA0030X | DNV TAA00000JD | ClassNK TA24034M | EAC TR-CU 020/2011 TR-CU 004/2011 TR-CU 012/2011 | -20°C ≤ Ta ≤ +60°C

SOLENOID / ALARM DRIVER 9203

DK Benforbindelser
UK Pin connections
FR Raccordement des bornes
DE Klemmenanschluss

DK Godkendelser
UK Approvals
FR Homologations
DE Zulassungen

DK Påsætning af PR 4500:
1: Indsæt tappene på PR 4500 i hullerne øverst på modulet.
2: Sving PR 4500 på plads.
Aftagning af PR 4500:
3/4: Tryk på udløserknap i bunden af PR 4500 og sving PR 4500 op.

UK Mounting of PR 4500:
1: Insert the tabs of the PR 4500 into the holes at the top of the device.
2: Hinge the PR 4500 down until it snaps into place.
Demounting of the PR 4500
3: Push the release button on the bottom of the PR 4500 and hinge the the PR 4500 out and up.
4: With the PR 4500 hinged up, remove from holes at the top of the device.

FR Montage du PR 4500 :
1: Insérez les crochets du PR 4500 dans les trous en haut du module.
2: Poussez le bas du PR 4500 vers le module.
Démontage du PR 4500 :
3/4: Appuyez sur le bouton de déclenchement en dessous du PR 4500, puis tirez le PR 4500 vers le haut.

DE Anbringen des PR 4500:
1: Einbringen der beiden Fixierstifte des PR 4500 in die Öffnungen an der oberen Frontplatte des Gerätes.
2: Das Display PR 4500 an der Unterkante einrasten lassen.
Entfernen des PR 4500:
3/4: Die Entriegelung des PR 4500 an der Unterseite betätigen und das PR 4500 vorsichtig abnehmen.

	DK	UK	FR	DE
A	Indgangssignaler	Input signals	Signaux d'entrée	Eingangssignale
B	Udgangssignaler	Output signals	Signaux de sortie	Ausgangssignale
C	Alarm	Alarm	Alarme	Alarm
D	Ventil	Solenoid	Vanne	Ventil

PR electronics

9203QA01

LERBAKKEN 10, 8410 RØNDE DENMARK

ATEX/UKEX Installation drawing

For safe installation of 9203 the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.
Year of manufacture can be taken from the first two digits in the serial number.

For Installation in Zone 2 / Division 2 the following must be observed.
The 4501 programming module is to be used solely with PR electronics modules. It is important that the module is undamaged and has not been altered or modified in any way. Only 4501 modules free of dust and moisture shall be installed.

ATEX Certificate KEMA 07ATEX 0147 X
UKEX Certificate, 9203Bxxx DEKRA 23UKEX0106 X
UKEX Certificate, 9203Axxx, Bxxx DEKRA 21UKEX0181 X

Marking 9203Bxx

Ex II (1) [Ex ia Ga]
IIC/IIB/IIIA
(1) II [Ex ia Da] IIIC

Marking 9203Bxx, 9203Axx

II 3G Ex ec nC IIC T4 Gc

Standards EN 60079-0 : 2018, EN 60079-11 : 2012,
EN 60079-15 : 2019, EN60079-7:2015+A1:2018

Supply / Input
(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
Um: 253V, max. 400Hz

Special Conditions of Use
Install in pollution degree 2, overvoltage category II as defined in EN60664-1

Do not separate connectors when energized and an explosive gas mixture is present.
Do not mount or remove modules from the Power Rail when an explosive gas mixture is present.
Disconnect power before servicing.
The wiring of unused terminals is not allowed.

In type of protection [Ex ia Da] the parameters for intrinsic safety for gas group IIB are applicable.

For installation in Zone, the module shall be installed in an enclosure in type of protection Ex e, providing a degree of protection of at least IP54. Cable entry devices and blanking elements shall fulfill the same requirements.

For installation on Power Rail in Zone 2, only Power Rail type 9400 supplied by Power Control Unit type 9410 (Type Examination Certificate KEMA 07ATEX0152 X; DEKRA 21UKEX0169 X) is allowed.
Max. screw terminal torque 0.5 Nm.
Stranded wire should be installed with an insulation stripping length of 5 mm or via a suitable insulated terminal such as a bootface ferrule.

Revision date:	Version Revision	Prepared by:	Page:
2023-07-11	V8R1	MMA	1/4

PR electronics

9203QA01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203Bxxx Installation:

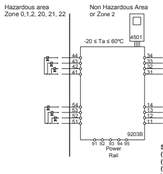

Supply / Input
(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
Um: 253V, max. 400Hz

Terminal (31,32)
Supply:
Voltage 19.2 – 31.2 VDC
Power max. 3.5 W

Terminal (11,12 and 13,14)
Input:
Voltage max 28VDC
Trig: NPN Low < 2V, High > 4V
Trig: PNP Low < 8V, High > 10V

Terminal (33,34)

Status Relay:	Non Hazardous location	Zone 2 installation
Voltage max.	125 VAC / 110 VDC	32 VAC / 32 VDC
Power max.	62.5 VA / 32 W	16 VA / 32 W
Current max.	0.5 AAC / 0.3 ADC	0.5 AAC / 1 ADC

Revision date:	Version Revision	Prepared by:	Page:
2023-07-11	V8R1	MMA	2/4

PR electronics

9203QA01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203BIA, 9203IIB Terminal 41-42/51-52				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	4.2mH	54µH/Ω	
Io	93 mA	IIB	640nF	16.8mH	218µH/Ω	
Po	0.65W	IIA	2.1µF	32.6mH	436µH/Ω	
		I	3.76µF	32.6mH	436µH/Ω	

9203BIA, 9203IIB Terminal 41-43/51-53				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	3.5mH	54µH/Ω	
Io	100mA	IIB	640nF	14.2mH	218µH/Ω	
Po	0.70W	IIA	2.1µF	27.6mH	436µH/Ω	
		I	3.76µF	27.6mH	436µH/Ω	

9203BIA, 9203IIB Terminal 41-44/51-54				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	2.9mH	46µH/Ω	
Io	110mA	IIB	640nF	11.8mH	184µH/Ω	
Po	0.77W	IIA	2.1µF	22.8mH	369µH/Ω	
		I	3.76µF	22.8mH	369µH/Ω	

9203BIA Terminal 41-42				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	2.69mH	44µH/Ω	
Io	115mA	IIB	640nF	10.8mH	176µH/Ω	
Po	0.81W	IIA	2.1µF	20.8mH	353µH/Ω	
		I	3.76µF	20.8mH	353µH/Ω	

9203BIA Terminal 41-43				Co	Lo	Lo/Ro
Uo	28V	IIC				
Io	125mA	IIB	640nF	9.1mH	163µH/Ω	
Po	0.88W	IIA	2.1µF	17.6mH	327µH/Ω	
		I	3.76µF	17.6mH	327µH/Ω	

9203BIA Terminal 41-44				Co	Lo	Lo/Ro
Uo	28V	IIC				
Io	135mA	IIB	640nF	7.8mH	150µH/Ω	
Po	0.95W	IIA	2.1µF	15.1mH	301µH/Ω	
		I	3.76µF	15.1mH	301µH/Ω	

9203Axxx Installation:
Non Classified area or Zone 2

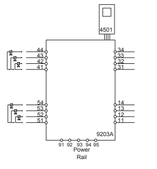

Terminal (31,32)
Supply:
Voltage 19.2 – 31.2 VDC
Power max. 3.5 W

Terminal (11,12 and 13,14)
Input:
Voltage max 28VDC
Trig: NPN Low < 2V, High > 4V
Trig: PNP Low < 8V, High > 10V

Terminal (33,34)

Status Relay:	**Non Hazardous location**	**Zone 2 installation**
Voltage max.	125 VAC / 110 VDC	32 VAC / 32 VDC
Power max.	62.5 VA / 32 W	16 VA / 32 W
Current max.	0.5 AAC / 0.3 ADC	0.5 AAC / 1 ADC

Terminal (41..44 / 51..54)
Umax 28 V
Imax 135 mA
Pmax 0.95 W

Revision date:	Version Revision	Prepared by:	Page:
2023-07-11	V8R1	MMA	4/4

PR electronics

9203QU01

LERBAKKEN 10, 8410 RØNDE DENMARK

UL Installation drawing

For safe installation of the Process Control Equipment (Associated Apparatus) 9203 the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

For Installation in DIV2/Zone2 the following must be observed.
The 4501 programming module is to be used solely with PR electronics modules. It is important that the module is undamaged and has not been altered or modified in any way. Only 4501 modules free of dust and moisture shall be installed.

Model: 9203abcd-UA Solenoid / alarm driver
a: A or B See below
b: 1=Low current, 2=High current
c: An One channel, Bn Two Channel
d: Blank = Standard, 1=PNP, 2=NPN

Marking:

Proc. Cont. Eq. for Use in Haz. Loc. Install in CL I DIV2 GP A-D T4 provide IS circuits to CL I-III DIV 1 GP A-G or CL I ZN2 Gp IIC T4 provides IS E233311 circuits for CL I ZN0 Gp IICD/Zn20 Gp IIIC Umx253V [Exia] Installation Drawing: 9203QU01

The 9203Bxxx-U9 is galvanically isolating associated apparatus intended for installation in non-hazardous locations or Class I, Division 2, Groups A – D hazardous locations with intrinsically safe connections to Class I, II and III hazardous locations.

Proc. Cont. Eq. for Use in Haz. Loc. Install in CL I DIV2 GP A-D T4 or CL I ZN2 Gp IIC T4 E233311 Installation Drawing: 9203QU01

The 9203Axxx-U9 equipment is intended for installation in non-hazardous locations or Class I Division 2, Groups A – D or Zone 2 Group IIC hazardous locations.

Standards:
- UL 121201 NONINCENDIVE ELECTRICAL EQUIPMENT FOR USE IN CLASS I AND II, DIVISION 2 AND CLASS III, DIVISIONS 1 AND 2 HAZARDOUS (CLASSIFIED) LOCATIONS Edition 9 - Revision Date 2018/08/31
- CSA C22.2 NO. 213 NONINCENDIVE ELECTRICAL EQUIPMENT FOR USE IN CLASS I DIVISION 2 AND CLASS II, DIVISION 2 AND CLASS III, DIVISION 1 AND 2 HAZARDOUS (CLASSIFIED) LOCATIONS- Edition 3 - Issue Date 2017/09/01
- UL 913 STANDARD FOR INTRINSICALLY SAFE APPARATUS AND ASSOCIATED APPARATUS FOR USE IN CLASS I, II, III, DIVISION 1, HAZARDOUS (CLASSIFIED) LOCATIONS- Edition 8 - Revision Date 2013/10/18
- CSA C22.2 NO. 60079-0 EXPLOSIVE ATMOSPHERES — PART 0: EQUIPMENT — GENERAL REQUIREMENTS- Edition 3 - Issue Date 2015/10/01
- CSA C22.2 NO. 60079-11 I.S EXPLOSIVE ATMOSPHERES — PART 11: EQUIPMENT PROTECTION BY INTRINSIC SAFETY "I"- Edition 2 - Issue Date 2014/02/01

Revision date:	Version Revision	Prepared by:	Page:
2019-11-21	V1R0	PR	1/6

PR electronics

9203QU01

LERBAKKEN 10, 8410 RØNDE DENMARK

Installation notes 9203Axxx-U9 and 9203Bxxx-U9

The module must be installed in a tool-secured enclosure suitable for the application in accordance with the National Electrical Code (ANSI/NFPA 70) for installation in the United States, the Canadian Electrical Code for installations in Canada, or other local codes, as applicable.

The module is galvanically isolated and does not require grounding.

Terminal 41, 42, 43, 44 are internally connected to CH1.
Terminal 51, 52, 53, 54 are internally connected to CH2.

Install in pollution degree 2, overvoltage category II in accordance with IEC 60664-1.

Use minimum 75 °C copper conductors with wire size AWG: (26-14)

Warning: Substitution of components may impair intrinsic safety.
Avertissement : La substitution des composants peut nuire à la sécurité intrinsèque'.

There are no serviceable parts in the equipment and no component substitution is permitted

Warning: To prevent ignition of the explosive atmospheres, disconnect power before servicing and do not separate connectors, install or remove module from Power Rail when energized and an explosive gas mixture is present.

Avertissement : Pour éviter l'inflammation d'atmosphères explosibles, déconnectez l'alimentation avant les opérations d'entretien. Ne montez pas ou n'enlevez pas les connecteurs quand le module est sous tension et en présence d'un mélange de gaz. Ne montez pas ou n'enlevez pas les modules du rail d'alimentation en présence d'un mélange de gaz.

Revision date:	Version Revision	Prepared by:	Page:
2019-11-21	V1R0	PR	2/6

PR electronics

9203QU01

LERBAKKEN 10, 8410 RØNDE DENMARK

Installation notes 9203Bxxx-U9:

Associated Equipment /Appareillage Associé [Ex ia]

The Ex output current of this associated apparatus is limited by a resistor such that the output voltage-current plot is a straight line drawn between open-circuit voltage and short-circuit current.

Selected intrinsically safe equipment must be third party listed as intrinsically safe for the application, and have intrinsically safe entity parameters conforming withTable 1 below.

TABLE 1:

IS Equipment		Associated Apparatus
V max (or Ui)	≥	Voc or Vt (or Uo)
I max (or Ii)	≥	Isc or It (or Io)
P max	≥	Po
C a cable	≤	Ca (or Co)
L/ R i cable	≤	La (or Lo)

The module may also be connected to a simple apparatus as defined in Article 504.2
and installed and temperature classified in accordance with Article 504.10(D) of the National Electrical Code (ANSI/NFPA 70), or other local codes, as applicable.

Capacitance and inductance of the field wiring from the intrinsically safe equipment to the associated apparatus shall be calculated and must be included in the system calculations as shown in Table 1. Cable capacitance, Ccable, plus intrinsically safe equipment capacitance. C must be less than the marked capacitance, Ca (or Co), shown on any associated apparatus used. The same applies for inductance (Lcable, Li and La or Lo, respectively). Where the cable capacitance and inductance per foot are not known, the following values shall be used: Ccable = 60 pF/ft., Lcable = 0.2 µH/ft.

Where multiple circuits extend from the same piece of associated apparatus, they must be installed in separate cables or in one cable having suitable insulation. Refer to Article 504.30(B) of the National Electrical Code (ANSI/NFPA 70) and Instrument Society of America Recommended Practice ISA RP12.06 for installing intrinsically safe equipment.

Intrinsically safe circuits must be wired and separated in accordance with Article 504.20 of the National Electrical Code (ANSI/NFPA 70) or other local codes, as applicable.

The module has not been evaluated for use in combination with another associated apparatus.

For installations in which both the Ci and Li of the intrinsically safe apparatus exceeds 1% of the Ca (or Co) and La (or Lo) parameters of the associated apparatus (excluding the cable), then 50% of Ca (or Co) and La (or Lo) parameters are applicable and shall not be exceeded. The reduced capacitance shall not be greater than 1 µF for Groups C and D, and 600 nF for Groups A and B. The values of Ca (or Co) and La (or Lo) determined by this method shall not be exceeded by the sum of all of Ci plus cable capacitances and the sum of all of the Li plus cable inductances in the circuit respectively.

Revision date:	Version Revision	Prepared by:	Page:
2019-11-21	V1R0	PR	3/6

PR electronics

9203QU01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203Bxxx-U9 Installation:

Hazardous Classified Location
Class I/II/III, Division 1, Group A,B,C,D,E,F,G
Zone 0,1, 2, Group IIC, IIB, IIA or
Zone 20, 21

Unclassified Location or Hazardous Classified Location
Class I, Division 2, Group ABCD T4
Class I Zone 2 Group IIC T4

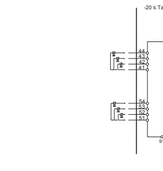

(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
Um: 253 V max. 400 Hz

Terminal (31,32)
Supply:
Voltage 19.2 – 31.2 VDC
Power max. 3.5 W

Terminal (11,12 and 13,14)
Input:
Voltage max 28VDC
Trig: NPN Low < 2V, High > 4V
Trig: PNP Low < 8V, High > 10V

Terminal (33,34)
Status Relay: **Non Hazardous location** **Class I Division 2 or Zone 2 installation:**
Voltage max. 125 Vac / 110 Vdc 32 Vac / 32 Vdc
Current max. 0.5 Aac / 0.3 Adc 0.5 Aac / 0.3 Adc

Revision date:	Version Revision	Prepared by:	Page:
2019-11-21	V1R0	PR	4/6

PR electronics

9203QU01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203BIA, 9203IIB Terminals 41-42/51-52				Ca, Co	La, Lo	Lo/Ro
Uo	28V	IIC	80nF	4,2mH	54µH/Ω	
Io	93 mA	IIB	640nF	16,8mH	218µH/Ω	
Po	0.65W	IIA	2,1µF	32,6mH	436µH/Ω	
		I	3,76µF	32,6mH	436µH/Ω	

9203BIA, 9203IIB Terminals 41-43/51-53				Ca, Co	La, Lo	Lo/Ro
Uo	28V	IIC	80nF	3,5mH	54µH/Ω	
Io	100mA	IIB	640nF	14,2mH	218µH/Ω	
Po	0,70W	IIA	2,1µF	27,6mH	436µH/Ω	
		I	3,76µF	27,6mH	436µH/Ω	

9203BIA, 9203IIB Terminals 41-44/51-54				Ca, Co	La, Lo	Lo/Ro
Uo	28V	IIC	80nF	2,9mH	46µH/Ω	
Io	110mA	IIB	640nF	11,8mH	184µH/Ω	
Po	0,77W	IIA	2,1µF	22,8mH	369µH/Ω	
		I	3,76µF	22,8mH	369µH/Ω	

9203BIA Terminals 41-42				Ca, Co	La, Lo	Lo/Ro
Uo	28V	IIC	80nF	2,69mH	44µH/Ω	
Io	115mA	IIB	640nF	10,8mH	176µH/Ω	
Po	0,81W	IIA	2,1µF	20,8mH	353µH/Ω	
		I	3,76µF	20,8mH	353µH/Ω	

9203BIA Terminals 41-43				Ca, Co	La, Lo	Lo/Ro
Uo	28V	IIC				
Io	125mA	IIB	640nF	9,1mH	163µH/Ω	
Po	0,88W	IIA	2,1µF	17,6mH	327µH/Ω	
		I	3,76µF	17,6mH	327µH/Ω	

9203BIA Terminals 41-44				Ca, Co	La, Lo	Lo/Ro
Uo	28V	IIC				
Io	135mA	IIB	640nF	7,8mH	150µH/Ω	
Po	0,95W	IIA	2,1µF	15,1mH	301µH/Ω	
		I	3,76µF	15,1mH	301µH/Ω	

9203Axxx-U9 and 9203Bxxx-U9 Installation:

Non Hazardous area or
Class I, Division 2, Group ABCD T4
or Zone 2 Group IIC T4

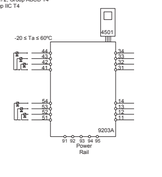

Terminal (31,32)
Supply:
Voltage 19.2 – 31.2 VDC
Power max. 3.5 W

Terminal (11,12 and 13,14)
Input:
Voltage max 28VDC
Trig: NPN Low < 2V, High > 4V
Trig: PNP Low < 8V, High > 10V

Terminal (33,34)
Status Relay: **Non Hazardous location** **Class I Division 2 Zone 2 installation**
Voltage max. 125 Vac / 110 Vdc 32 Vac / 32 Vdc
Current max. 0.5 Aac / 0.3 Adc 0.5 Aac / 0.3 Adc

Terminal (41..44 / 51..54)
Umax 28 V
Imax 135 mA
Pmax 0.95 W

Revision date:	Version Revision	Prepared by:	Page:
2019-11-21	V1R0	PR	5/6

PR electronics

9203QU01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203Axxx-U9 and 9203Bxxx-U9 Installation:

Non Hazardous area or
Class I, Division 2, Group ABCD T4
or Zone 2 Group IIC T4

Terminal (31,32)
Supply:
Voltage 19.2 – 31.2 VDC
Power max. 3.5 W

Terminal (11,12 and 13,14)
Input:
Voltage max 28VDC
Trig: NPN Low < 2V, High > 4V
Trig: PNP Low < 8V, High > 10V

Terminal (33,34)
Status Relay: **Non Hazardous location** **Class I Division 2 Zone 2 installation**
Voltage max. 125 Vac / 110 Vdc 32 Vac / 32 Vdc
Current max. 0.5 Aac / 0.3 Adc 0.5 Aac / 0.3 Adc

Terminal (41..44 / 51..54)
Umax 28 V
Imax 135 mA
Pmax 0.95 W

Revision date:	Version Revision	Prepared by:	Page:
2019-11-21	V1R0	PR	6/6

PR electronics

9203QI01

LERBAKKEN 10, 8410 RØNDE DENMARK

IECEx Installation drawing

For safe installation of 9203 the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.
Year of manufacture can be taken from the first two digits in the serial number.

For Installation in Zone 2 / Division 2 the following must be observed.
The 4501 programming module is to be used solely with PR electronics modules. It is important that the module is undamaged and has not been altered or modified in any way. Only 4501 modules free of dust and moisture shall be installed.

IECEx Certificate: IECEx KEM 09.0001X

Marking 9203Bxxx [Ex ia Ga] IIC/IIB/IIA
[Ex ia Da] IIIC
[Ex ia Ma] I

Marking 9203Bxxx , 9203Axxx Ex ec nC IIC T4 Gc

Standards IEC60079-0:2017, IEC60079-11:2011,
IEC60079-15:2017, IEC60079-7:2015+A1:2017

Type	Installation		Current Output		Channels		Input	
9203	Non Ex / Zone 2	A	Low current	:1	Single	A	Standard	: -
					Double	B		
	Ex-Barrier / Zone 2	B					PNP	: 1
			High current	:2	Single	A	NPN	: 2

Installation notes.
Install in pollution degree 2, overvoltage category II as defined in IEC60664-1.
Do not separate connectors when energized and an explosive gas mixture is present.
Do not mount or remove modules from the Power Rail when an explosive gas mixture is present.
Disconnect power before servicing.
The wiring of unused terminals is not allowed.
In type of protection [Ex ia Da] the parameters for intrinsic safety for gas group IIB are applicable.

For installation in Zone, the module shall be installed in an enclosure in type of protection Ex e, providing a degree of protection of at least IP54. Cable entry devices and blanking elements shall fulfill the same requirements.

For installation on Power Rail in Zone 2, only Power Rail type 9400 supplied by Power Control Unit type 9410 (IECEx Certificate of Conformity IECEx KEM 08.0025X) is allowed.

Max. screw terminal torque 0.5 Nm.
Stranded wire should be installed with an insulation stripping length of 5 mm or via a suitable insulated terminal such as a bootface ferrule.

Revision date:	Version Revision	Prepared by:	Page:
2024-03-01	V8R0	THDE	1/4

PR electronics

9203QI01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203Bxxx Installation:

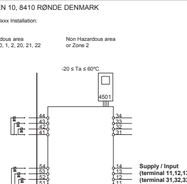

Supply / Input
(terminal 11,12,13,14)
(terminal 31,32,33,34)
(terminal 91,92,93,94,95)
Um: 253V, max. 400Hz

Terminal (31,32)
Supply:
Voltage 19.2 – 31.2 VDC
Power max. 3.5 W

Terminal (11,12 and 13,14)
Input:
Voltage max 28VDC
Trig: NPN Low < 2V, High > 4V
Trig: PNP Low < 8V, High > 10V

Terminal (33,34)
Status Relay: **Non Hazardous location** **Zone 2 installation**
Voltage max. 125 VAC / 110 VDC 32 VAC / 32 VDC
Power max. 62.5 VA / 32 W 16 VA / 32 W
Current max. 0.5 AAC / 0.3 ADC 0.5 AAC / 1 ADC

Revision date:	Version Revision	Prepared by:	Page:
2024-03-01	V8R0	THDE	2/4

PR electronics

9203QI01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203BIA, 9203IIB Terminals 41-42/51-52				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	4,2mH	54µH/Ω	
Io	93 mA	IIB	640nF	16,8mH	218µH/Ω	
Po	0,65W	IIA	2,1µF	32,6mH	436µH/Ω	
		I	3,76µF	32,6mH	436µH/Ω	

9203BIA, 9203IIB Terminals 41-43/51-53				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	3,5mH	54µH/Ω	
Io	100mA	IIB	640nF	14,2mH	218µH/Ω	
Po	0,70W	IIA	2,1µF	27,6mH	436µH/Ω	
		I	3,76µF	27,6mH	436µH/Ω	

9203BIA, 9203IIB Terminals 41-44/51-54				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	2,9mH	46µH/Ω	
Io	110mA	IIB	640nF	11,8mH	184µH/Ω	
Po	0,77W	IIA	2,1µF	22,8mH	369µH/Ω	
		I	3,76µF	22,8mH	369µH/Ω	

9203BIA Terminals 41-42				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	2,69mH	44µH/Ω	
Io	115mA	IIB	640nF	10,8mH	176µH/Ω	
Po	0,81W	IIA	2,1µF	20,8mH	353µH/Ω	
		I	3,76µF	20,8mH	353µH/Ω	

9203BIA Terminals 41-43				Co	Lo	Lo/Ro
Uo	28V	IIC				
Io	125mA	IIB	640nF	9,1mH	163µH/Ω	
Po	0,88W	IIA	2,1µF	17,6mH	327µH/Ω	
		I	3,76µF	17,6mH	327µH/Ω	

9203BIA Terminals 41-44				Co	Lo	Lo/Ro
Uo	28V	IIC				
Io	135mA	IIB	640nF	7,8mH	150µH/Ω	
Po	0,95W	IIA	2,1µF	15,1mH	301µH/Ω	
		I	3,76µF	15,1mH	301µH/Ω	

9203Axxx Installation
Non Classified area or Zone 2

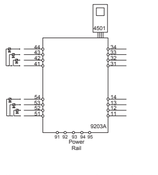

Terminal (31,32)
Supply:
Voltage 19.2 – 31.2 VDC
Power max. 3.5 W

Terminal (11,12 and 13,14)
Input:
Voltage max 28VDC
Trig: NPN Low < 2V, High > 4V
Trig: PNP Low < 8V, High > 10V

Terminal (33,34)
Status Relay: **Non Hazardous location** **Zone 2 installation**
Voltage max. 125 VAC / 110 VDC 32 VAC / 32 VDC
Power max. 62.5 VA / 32 W 16 VA / 32 W
Current max. 0.5 AAC / 0.3 ADC 0.5 AAC / 1 ADC

Terminal (41..44 / 51..54)
Umax 28 V
Imax 135 mA
Pmax 0.95 W

Revision date:	Version Revision	Prepared by:	Page:
2024-03-01	V8R0	THDE	4/4

PR electronics

9203QKC01

LERBAKKEN 10, 8410 RØNDE DENMARK

KC 설치 도면

9203 의 안전한 설치를 위해 다음 사항을 준수해야 합니다. 이 모듈은 이 지역에 적용되는 국내 및 국제 법률, 지침 및 표준에 명통한 유자격자만 설치해야 합니다.
제조연도는 일련번호의 처음 두 자리입니다.

구역 2 / 디비전 2 에 설치하려면 다음 사항을 준수해야 합니다.
4501 프로그래밍 모듈은 PR 제품과 모듈과 함께 사용해야 합니다. 모듈의 손상되지 않았고, 어떤 식으로든 변경 되는 수정되지 않는 것이 중요합니다. 먼지와 습기가 없는 상태에서 4501 모듈을 설치해야 합니다.

KC 인증서: 21-AVH0O-0183X
마킹 9203Bxxx [Ex ia Da] IIIC

KC 인증서: 21-AVH0O-0182X
마킹 9203Bxxx [Ex ia Ga] IIC,IIB/IIA

KC 인증서: 21-AVH0O-0184X
마킹 9203Axxx Ex nA nC IIC T4 Gc

표준 IEC60079-0:2017, IEC60079-11:2011,
IEC60079-15:2017, IEC60079-7:2015+A1:2017

모델	위치	프로세스		개방		배선	
9203	비 Ex / 구역 2	A	저전류	:1	단일	A	표준 : -
					이중	B	
	Ex 배리어 / 구역 2	B	고전류	:2	단일	A	PNP :1
							NPN :2

설치 참고 사항
IEC60664-1 에 명시된 대로 오염 등급 2, 과전압 범주 II 에 설치하십시오.
전원이 공급되고 폭발성 가스 혼합물이 있는 경우, 커넥터를 분리하지 마십시오.
폭발성 가스 혼합물이 있는 경우, 파워 레일에 모듈을 장착하거나 제거하지 마십시오.
수리하기 전에 전원을 분리하십시오.
사용하지 않는 단자의 배선은 허용되지 않습니다.
보호 유형 [Ex ia Da]에서는 가스 그룹 IIB 의 본질 안전 매개변수를 적용할 수 있습니다.

구역 2 에 설치하는 경우, 모듈을 보호 유형 Ex e 또는 Ex e 인 인클로저에 설치하고, 최소한 IP54 의 보호 수준을 제공해야 합니다. 케이블 인입 장치에 일체 요소는 동일한 요구 사항을 충족해야 합니다.

구역 2 의 파워 레일에 설치하는 경우, 인증 제어 장치 유형 9410(IECEx 적합성 인증서 IECEx KEM 08.0025X)에 공급을 받는 파워 레일 유형 9400 만 허용됩니다.
최대 나사 단자대 토크 0.5 Nm.
연선은 5mm 의 절연 피복을 벗겨 후 사용을 하거나 부트페룰스 페룰과 같은 적절한 절연 단자를 통해 설치해야 합니다.

Revision date:	Version Revision	Prepared by:	Page:
2024-03-01	V1R0	THDE	1/4

PR electronics

9203QKC01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203Bxxx 설치:

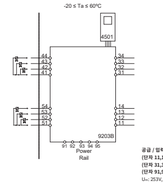

공급 / 입력
(단자 11,12,13,14)
(단자 31,32,33,34)
(단자 91,92,93,94,95)
Um: 253V, 최대 400Hz

단자 (31,32)
공급:
전압 19.2 – 31.2 VDC
최대 출력 3.5 W

단자 (11,12 and 13,14)
입력:
전압 최대 28 VDC
트리거: NPN 낮음 < 2 V, 높음 > 4 V
트리거: PNP 낮음 < 8 V, 높음 > 10 V

단자 (33,34)

상태 릴레이:	**비위험 장소**	**구역 2 설치**
최대 전압	125 VAC / 110 VDC	32 VAC / 32 VDC
최대 출력	62.5 VA / 32 W	16 VA / 32 W
최대 전류	0.5 AAC / 0.3 ADC	0.5 AAC / 1 ADC

Revision date:	Version Revision	Prepared by:	Page:
2024-03-01	V1R0	THDE	2/4

PR electronics

9203QKC01

LERBAKKEN 10, 8410 RØNDE DENMARK

9203BIA, 9203IIB 단자 41-42/51-52				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	4.2mH	54µH/Ω	
Io	93 mA	IIB	640nF	16.8mH	218µH/Ω	
Po	0.65W	IIA	2.1µF	32.6mH	436µH/Ω	
		I	3.76µF	32.6mH	436µH/Ω	

9203BIA, 9203IIB 단자 41-43/51-53				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	3.5mH	54µH/Ω	
Io	100mA	IIB	640nF	14.2mH	218µH/Ω	
Po	0.70W	IIA	2.1µF	27.6mH	436µH/Ω	
		I	3.76µF	27.6mH	436µH/Ω	

9203BIA, 9203IIB 단자 41-44/51-54				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	2.9mH	46µH/Ω	
Io	110mA	IIB	640nF	11.8mH	184µH/Ω	
Po	0.77W	IIA	2.1µF	22.8mH	369µH/Ω	
		I	3.76µF	22.8mH	369µH/Ω	

9203BIA 단자 41-42				Co	Lo	Lo/Ro
Uo	28V	IIC	80nF	2.69mH	44µH/Ω	
Io	115mA	IIB	640nF	10.8mH	176µH/Ω	
Po	0.81W	IIA	2.1µF	20.8mH	353µH/Ω	
		I	3.76µF	20.8mH	353µH/Ω	

9203BIA 단자 41-43				Co	Lo	Lo/Ro
Uo	28V	IIC				
Io	125mA	IIB	640nF	9.1mH	163µH/Ω	
Po	0.88W